

Viper Mini MK II Wire Rope Lubricator



Manufactured & Distributed By



Contents

1.0 Introduction	3
2.0 The Viper Mini MKII Kit Components	4
3.0 Viper Mini MKII Kit Components Assembled & Numbered	5
3.1 Viper Mini MKII Standard Kit.....	5
3.1.1 Viper Mini MKII Standard Complete 20KG Kit.....	5
3.1.2 Viper Mini MKII Standard Complete Collar.....	6
3.1.3 Viper Mini MKII Standard Complete 20KG Pump Kit.....	7
3.1.4 Viper Mini MKII Standard 20KG Complete Hose.....	8
3.2 Viper Mini MKII High Speed Kit.....	9
3.2.1 Viper Mini MKII HS Complete 20KG Kit	9
3.2.2 Viper Mini MKII HS Complete Collar.....	10
3.2.3 Viper Mini MKII HS Complete 20KG Pump Kit	11
3.2.4 Viper Mini MKII HS 20KG Complete Hose	12
4.0 Assembly Instructions Viper Mini MKII Standard	13
5.0 Viper Mini MKII High Flow Assembly Instructions.....	16
6.0 Ratchet Strap Buckle Assemblies - Ref: AW107	17
7.0 Operating Instructions Viper Mini MKII Standard	18
8.0 Operating Instructions Viper Mini MKII High Speed (HS).....	20
9.0 Lubricant Penetration	22
10.0 Equipment Specifications	23
11.0 Trouble Shooting	24
12.0 Safety Recommendations	25
12.1 Caution Level Rating.....	25
12.2 Viper Mini MKII Assembly and Use.....	26
13.0 Guarantee	27



1.0 Introduction


The **VIPER MINI MKII** Wire Rope Lubricator is an Australian designed and built lubricator for wire rope sizes from 6mm (1/4") to 36mm (1 7/16"). It provides fast and effective single pass lubrication of wire ropes, eliminating the slow and arduous task of manual lubrication. Lubrication of wire ropes with the Viper system provides superior protection against corrosion and fretting wear by forcing lubricant into the core of the wire rope while also coating the outer strands. The use of the Viper Mini MKII WRL improves operator safety and reduces the environmental impact of wire rope lubrication for any size operation.

Page | 3

1.1 Key features of the Viper Mini MKII WRL include:

1. Viper collar constructed from high grade aluminium with a high visibility corrosion resistant coating.
2. Unique polyurethane seal design provides largest pressure contact area to ensure maximum lubricant penetration.
3. Durable and wear resistant polyurethane seals last thousands of metres in normal service.
4. Seal size range to cater for rope sizes 6mm to 36mm.
5. The Viper Mini MKII Standard Kit: 50:1 grease pump delivers lubricant at up to 2.9kg per minute and pressures up to 5,000 psi.
The Viper Mini MKII High Speed Kit: 45:1 grease pump delivers lubricant at up to 4.5kg per minute and pressures up to 5,000 psi.
6. Global distribution network which provides local customer support.

Viper Mini MKII collar with Seals in place

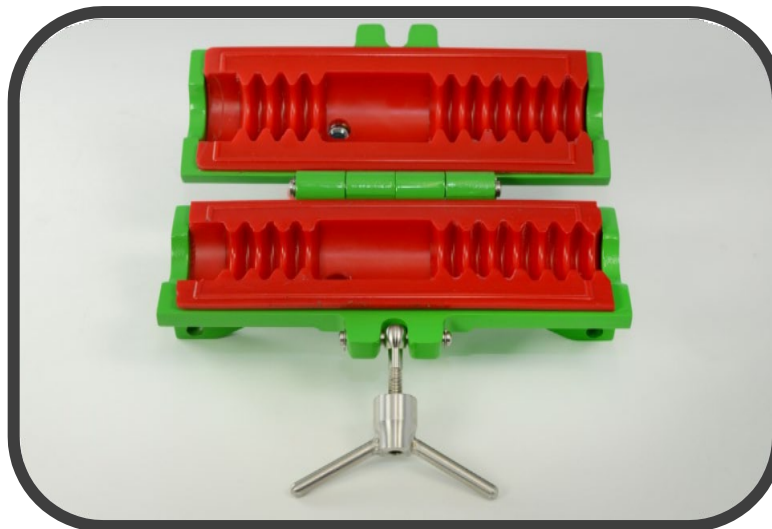

2.0 The Viper Mini MKII Kit includes the following components:


- 1) Viper lubricator collar, cast aluminium, includes lubricant delivery line quick connect coupling.
- 2) High pressure high flow customized Viper 50:1 (Standard Kit) or 45:1 (High Speed Kit) grease pump to suit 20kg drum which comes preassembled with:
 - a) Air control valve
 - b) Air regulator with gauge
 - c) Male quick connect fitting
- 3) Four (4) metre, high pressure, 3/8" hydraulic hose complete with female quick connect couplings on each end.
- 4) Two (2) x 2 metre ratchet straps rated to 500kg.
- 5) Four (4) x "Bow" shackles.
- 6) Heavy duty aluminium storage case with stainless steel fixtures.
- 7) Polyurethane seals (ordered separately)
 - a) Sized to suit specific size ropes - 6mm (1/4") to 36mm (1 7/16").
 - b) Refer to selection guide when ordering
- 8) Viper Wire Cleaners (optional accessory)
 - a) Available to suit a variety of ropes – Refer to selection guide when ordering



3.0 Viper Mini MKII Kit Components Assembled & Numbered

3.1 Viper Mini MKII Standard Kit


3.1.1 Viper Mini MKII Standard Complete 20KG Kit

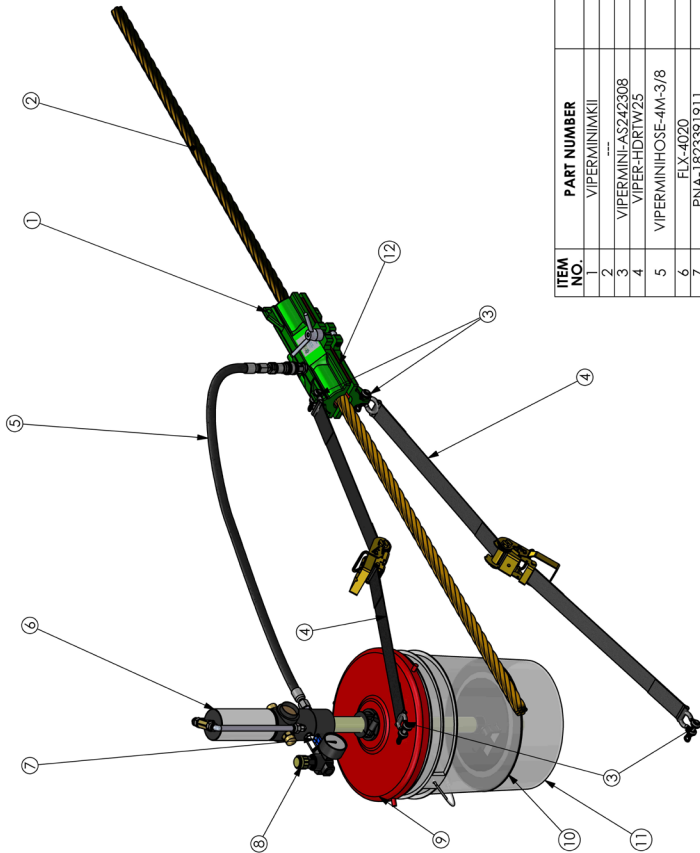

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMINIMKII	COMPLETE VIPER MINI MARKII KIT COLLAR	1
2	VIPERMINI-AS242308	WIRE ROPE	1
3	VIPER-HDRTW25	VIPER MINI BOW SHACKLE	4
4		RATCHET STRAPS	2
5	VIPERMINIHOSE-4M-3/8	4MTRS 3/8" DWB HOSE WITH QUICK CONNECTS AT EACH END	1
6	FLX-4020	VIPER GREASE PUMP 50.1, 2,900 GRAMS/MIN	1
7	PNA-1823391911	AIR FLOW CONTROL VALVE	1
8	FLX-7200	AIR PRESSURE REGULATOR WITH GAUGE	1
9	FLX-4302	20KG DRUM COVER	1
10	FLX-4314A	20KG FOLLOWER PLATE	1
11	**REF1**	VIPER LUBRICANT PAIL	1
12	**REF1**	VIPER SEALS	1

****REF1** : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE**


3.1.2 Viper Mini MKII Standard Complete Collar

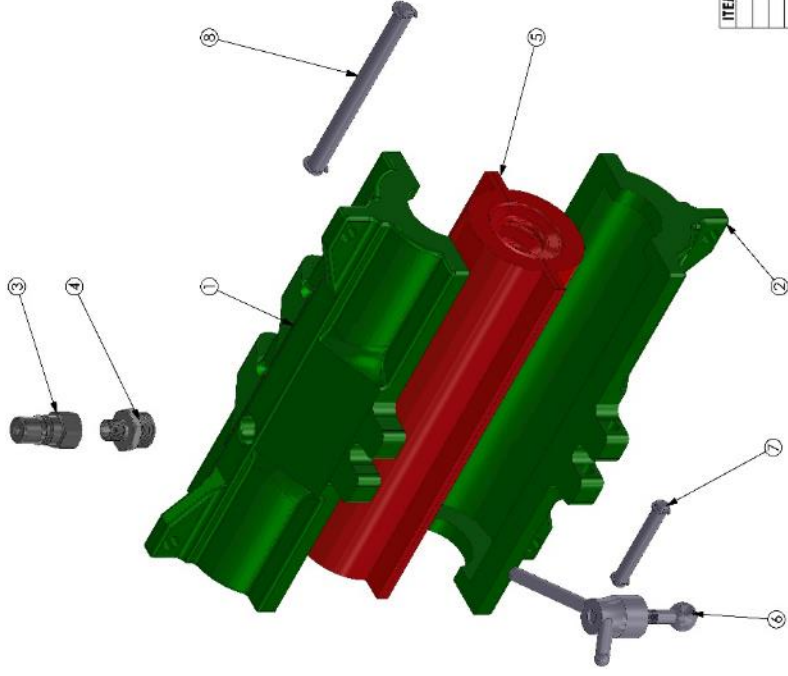


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMINIKCOLLAR-TOP	VIPER COLLAR MINI MK II TOP HALF	1
2	VIPERMINIKCOLLAR-BOTTOM	VIPER COLLAR MINI MK II BOTTOM HALF	1
3	VIPERMINIKCOLLAR-CONNECT	MALE 1/4" QUICK CONNECT ADAPTOR	1
4	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
5	**REF1**	POLYURETHANE SEAL	1
6	VIPERMINIKHLOCKMECHANISM	LOCKING MECHANISM MADE OF SWIVEL SCREW, LOCK NUT WITH HANDLE AND 2 WASHERS	1
7	VIPERMINIKHLOCKPIN	PINS TO SUPPORT THE VIPERMINIKH LOCKMECHANISM	1
8	VIPERMINIKHINGEPIN	PINS TO HOLD BOTH HALVES OF THE VIPER MINI MKII	1

REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

3.1.3 Viper Mini MKII Standard Complete 20KG Pump Kit

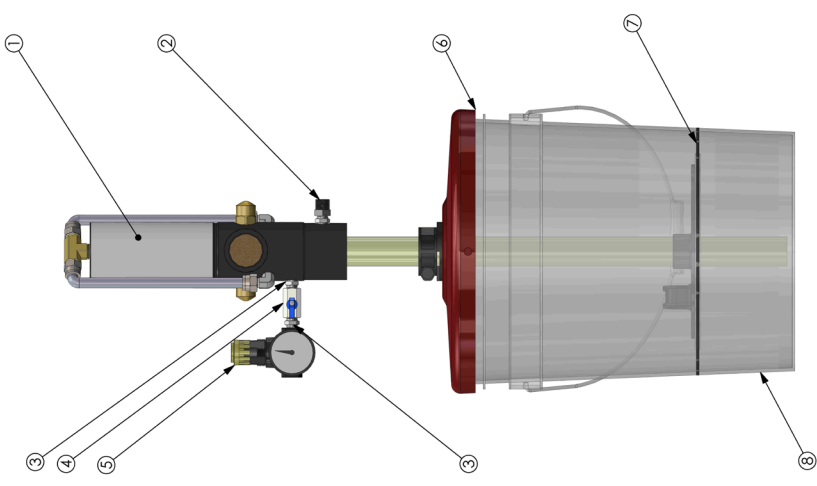


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-4020	VIPER GREASE PUMP 60 L 2,900 GRAMS/MIN	1
2	HL-A-E-0604	3/8" BSPT MALE X 1/4" BSPT FEMALE FITTING	1
3	HL-A-A-0404	1/4" BSPT MALE X 1/4" BSPT MALE FITTING	2
4	PNA-1823391911	AIR FLOW CONTROL VALVE	1
5	FLX-7200	AIR PRESSURE REGULATOR WITH GAUGE	1
6	FLX-4302	20KG DRUM COVER	1
7	FLX-4314A	20KG FOLLOWER PLATE	1
8	----	VIPER LUBRICANT PAIL	1




Viper Mini MKII
Complete Standard
20KG Pump Kit
Part No: VIP-00110

3.1.4 Viper Mini MKII Standard 20KG Complete Hose

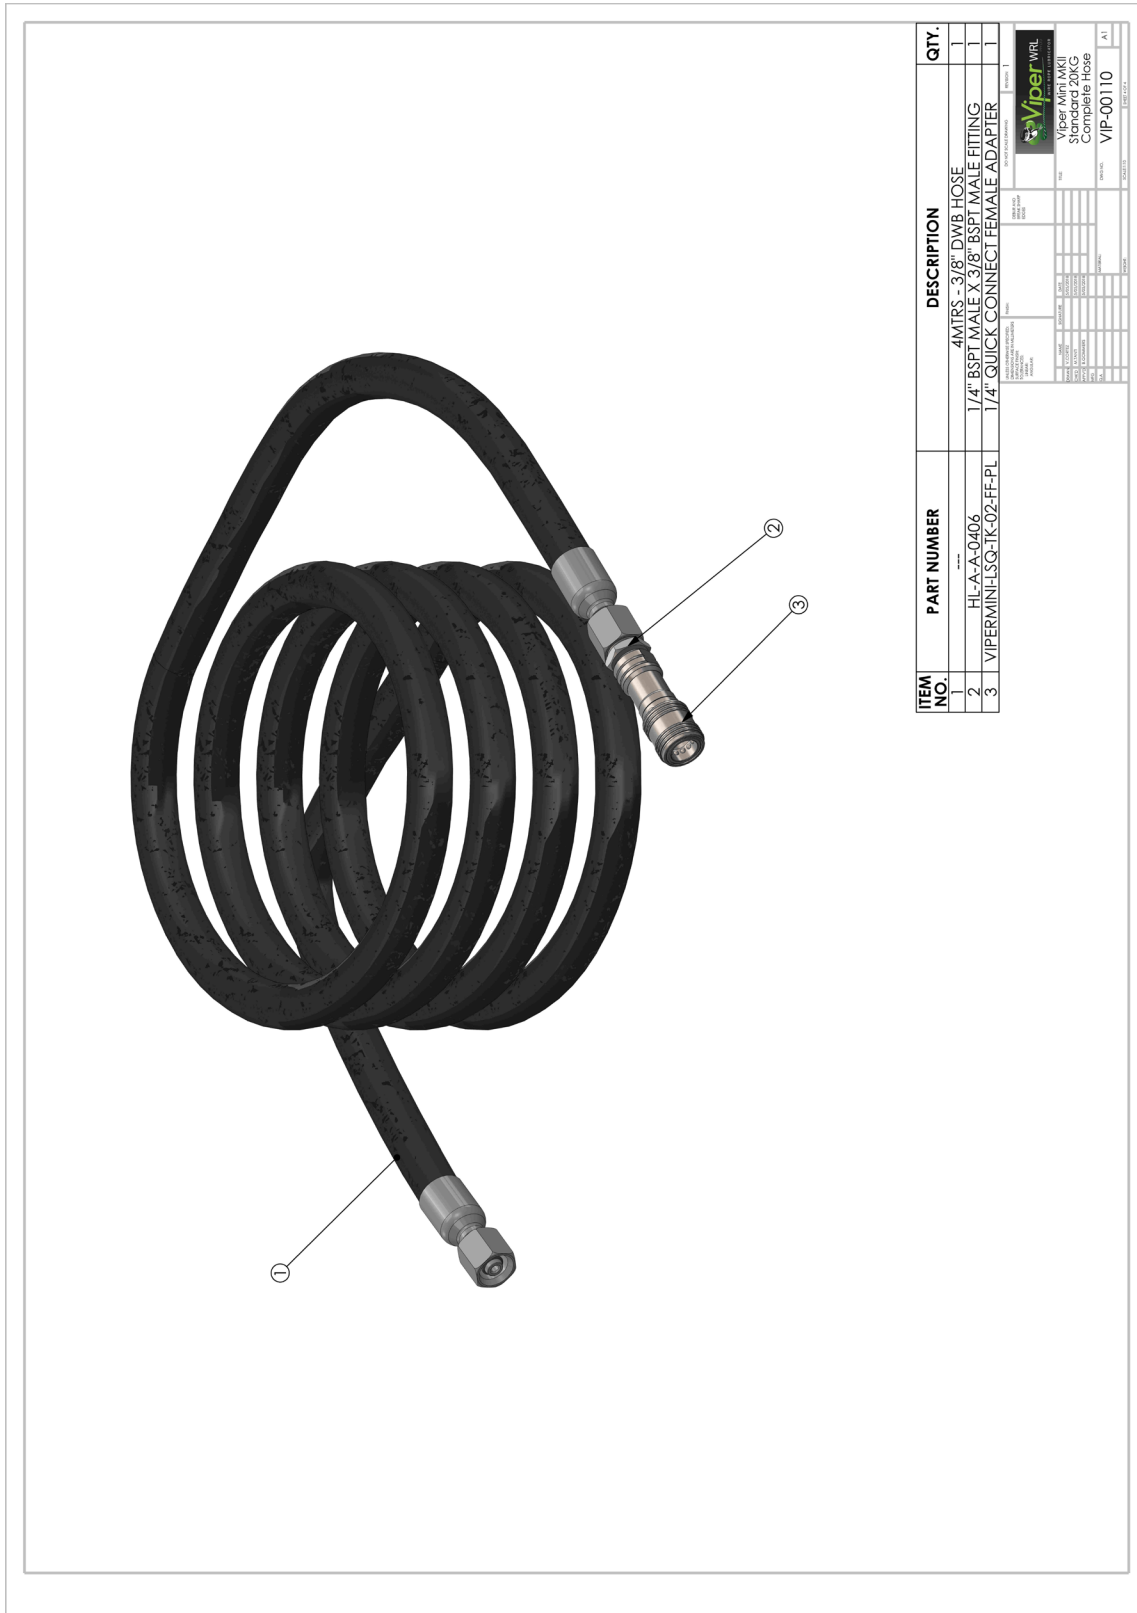


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	4MTRS - 3/8" DWB HOSE		1
2	HL-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
3	VIPERMINI-LSQ-TK-02-FE-PL	1/4" QUICK CONNECT FEMALE ADAPTER	1

	
Viper Mini MKII Standard 20KG Complete Hose	
PART NO.	VIP-00110
REV.	A1

3.2 Viper Mini MKII High Speed Kit


3.2.1 Viper Mini MKII HS Complete 20KG Kit

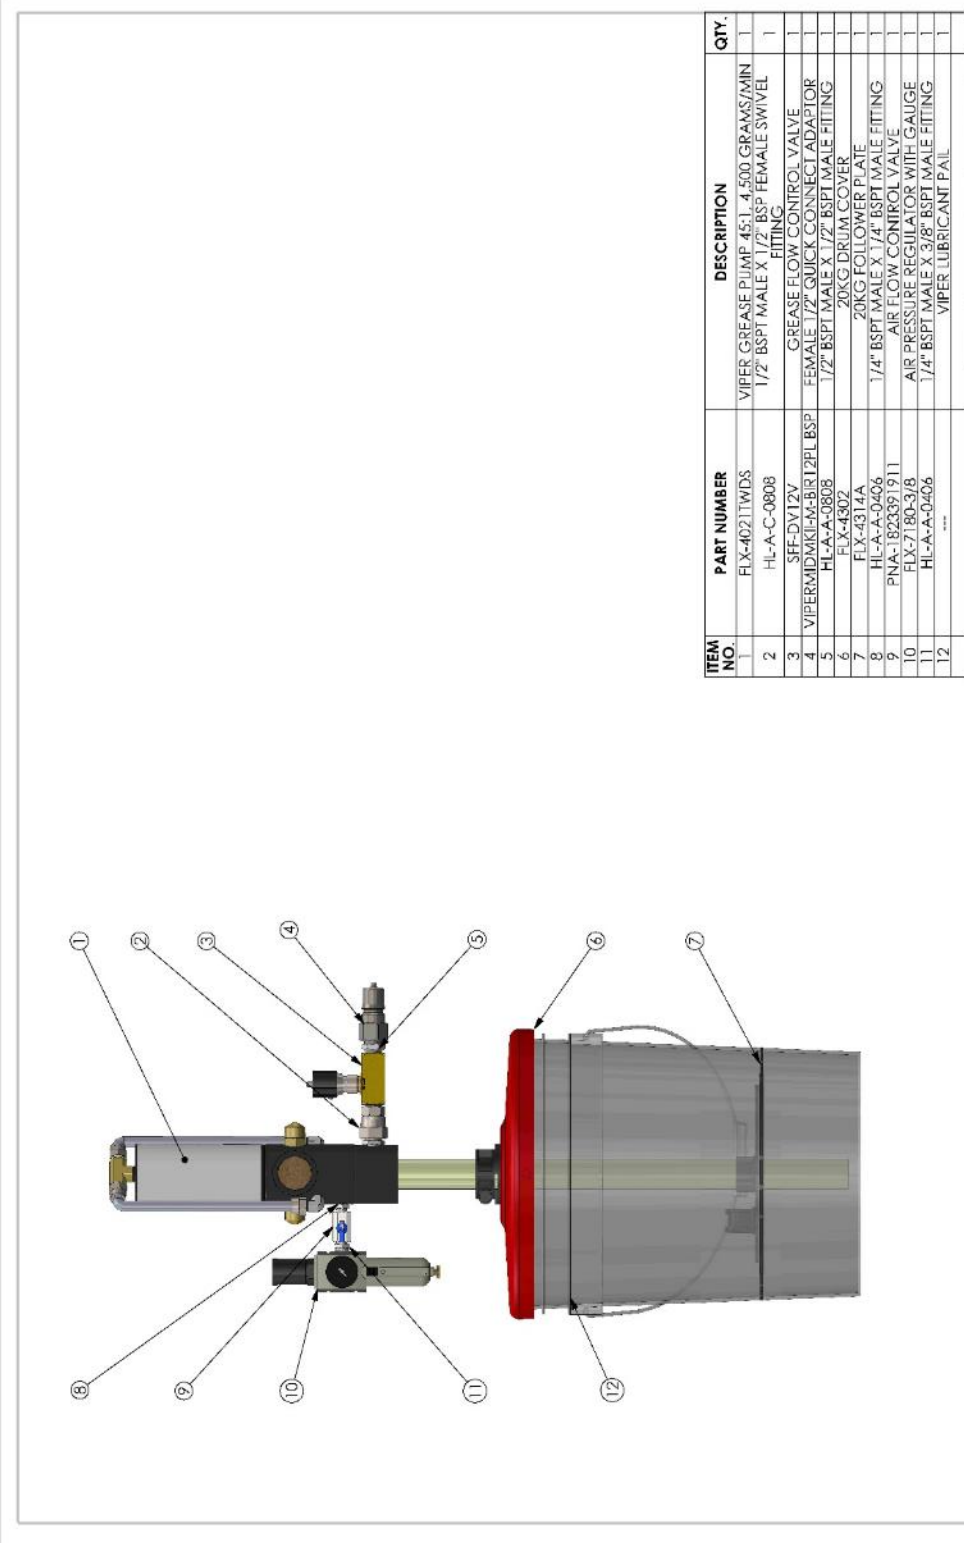

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-4021TWDS	VIPER GREASE PUMP 45:1 4-500 GRAMS/MIN	1
2	HL-A-C-0808	1/2" BSPT MALE X 1/2" BSP FEMALE SWIVEL FITTING	1
3	SFE-DV12V	GREASE FLOW CONTROL VALVE	1
4	VIPERMIDMKIIA-BR12PLBSP	FEMALE 1/2" QUICK CONNECT ADAPTOR	1
5	HL-A-A-0808	1/2" BSPT MALE X 1/2" BSPT MALE FITTING	1
6	FLX-4302	20KG DRUM COVER	1
7	FLX-1314A	20KG FOIL LOWER PLATE	1
8	HL-A-0404	1/4" BSPT MALE X 1/4" BSPT MALE FITTING	1
9	PNA-1923391911	AIR FLOW CONTROL VALVE	1
10	FLX-7180-3/8	AIR PRESSURE REGULATOR WITH GAUGE	1
11	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
12		VIPER LUBRICANT PAIL	1

****REF1**** : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
****REF2**** : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE


3.2.2 Viper Mini MKII HS Complete Collar

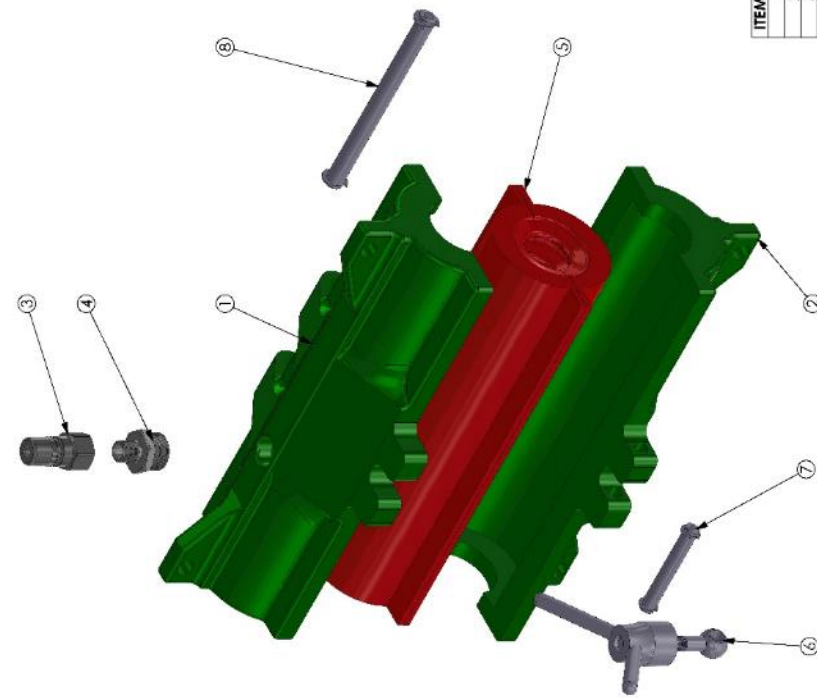

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMINIKIICOLLAR-TOP	VIPER COLLAR MINI MK II TOP HALF	1
2	VIPERMINIKIICOLLAR-BOTTOM	VIPER COLLAR MINI MK II BOTTOM HALF	1
3	VIPERMINIISO-K-02-F-F-PL	MALE 1/4" QUICK CONNECT ADAPTOR	1
4	HL-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
5	--REF2**--	POLYURETHANE SEAL	1
6	VIPERMINIKII-LOCKMECHANISM	LOCKING MECHANISM MADE OF SWIVEL SCREW, LOCK NUT WITH HANDLE AND 2 WASHERS	1
7	VIPERMINIKII-LOCKPIN	PINS TO SUPPORT THE VIPERMINIKII-LOCKMECHANISM	1
8	VIPERMINIKIIHINGEPIN	PINS TO HOLD BOTH HALVES OF THE VIPER MINI MKII	1

****REF1**** : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
****REF2**** : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE


3.2.3 Viper Mini MKII HS Complete 20KG Pump Kit

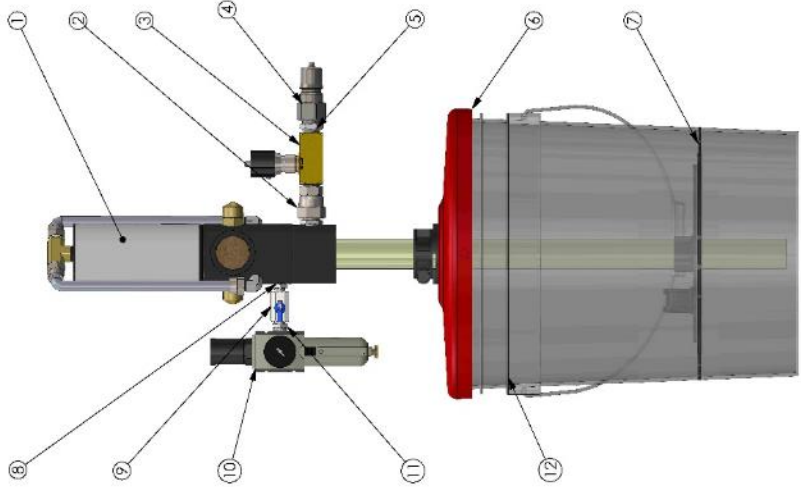

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-4021TWDS	VIPER GREASE PUMP 45L 4,500 GRAMS/MIN 1/2" BSPT MALE X 1/2" BSP FEMALE SWIVEL FITTING	1
2	HL-A-C-0808	GREASE FLOW CONTROL VALVE	1
3	SFF-DV12V	FEMALE 1/2" QUICK CONNECT ADAPTOR	1
4	VIPERMIDMKII-M-BR1/2PL BSP	1/2" BSPT MALE X 1/2" BSPT MALE FITTING	1
5	HL-A-A-0808	20KG DRUM COVER	1
6	FLX-4314A	20KG FOLLOWER PLATE	1
7	HL-A-D-406	1/4" BSPT MALE X 1/4" BSPT MALE FITTING	1
8	HL-A-D-406	AIR FLOW CONTROL VALVE	1
9	PN-A-1823391911	AIR PRESSURE REGULATOR WITH GAUGE	1
10	FLX-7180-3/8	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
11	HL-A-A-0406	VIPER LUBRICANT PAIL	1
12			

****REF1**** : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
****REF2**** : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

3.2.4 Viper Mini MKII HS 20KG Complete Hose




ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	----	4MTRS - 1/2" DWB HOSE	1
2	HL-A-0808	1/2" BSPT MALE X 1/2" BSPT MALE FITTING	1
3	VIPERMINIKIL-F-BIR12PL BSP	1/2" QUICK CONNECT FEMALE ADAPTER	1
4	HL-A-0408	1/4" BSPT MALE X 1/2" BSPT MALE FITTING	1
5	VIPERMINI-LSQ-TK-02-FF-PL	1/4" QUICK CONNECT FEMALE ADAPTER	1

****REF1**** : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
****REF2**** : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE





4.0 Viper Mini MKII Standard Assembly Instructions

1. Remove all components from Viper aluminium carry case, unpack from packing materials and lay out on a flat surface. Check all items are present as per your purchase order.
2. Remove grease pump noting that the air inlet isolation valve, air regulator is preassembled onto the pump.
 - Connect site specific compressed air connector to the air regulator.
 - Standard Pump
 - High Speed Pump
3. Remove lid from lubricant container and place follower plate onto the top of the lubricant. Press down firmly until the follower plate comes in contact with the lubricant.
 - Note the Viper lubricator should only be used with high quality wire rope lubricants with a consistency of NLGI #00 to #2.
4. Fit the drum cover over the top of the lubricant container and tighten the three securing screws until they contact the container.
5. Clamp the grease pump handle onto the grease pump body and tighten the two screws.
6. Slide the grease pump shaft into the opening of the drum cover and the follower plate. Push the grease pump down into the grease until it touches the base of the grease container.
7. Connect the high-pressure grease hose to the grease pump outlet via the quick connect coupling.
 - Standard Pump
 - High Speed Pump

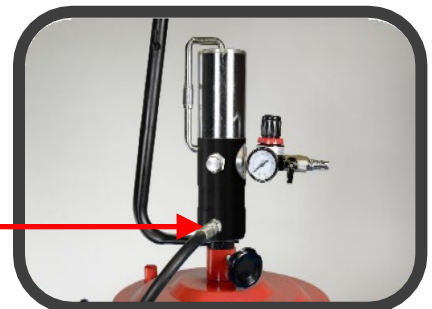


8. Remove the Viper collar from the packaging materials and loosen the clamping bolt allowing the collar to open.
9. Fit the Viper seals into the Viper collar. Make certain that the grease inlet holes on the seal and viper collar are aligned. Note: seals are sized to suit the wire rope as per the “Selection Guide”.
10. Clamp the lubricator collar fitted with seals around the wire rope to be lubricated, tightening the toggles.
 - Face the collar so that the hydraulic coupling is at the rope inlet end when the rope is being moved through the collar.
 - Locate the collar so that the optimum length of wire rope can be lubricated in a single pass, this is typically close to the winch drum.
11. Connect the high-pressure lubricant delivery hose to the Viper Collar using the quick connect coupler.

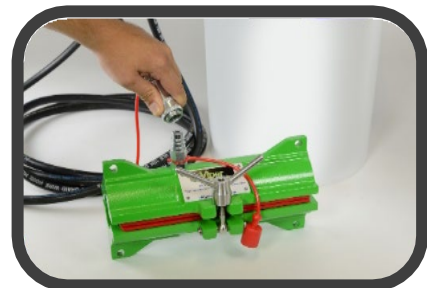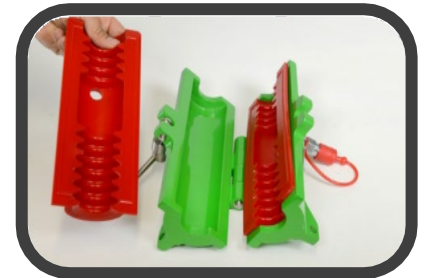


12 To secure the Viper lubricator collar in place, use the nylon ratchet straps and 'Bow' shackles.

- Secure one end of the ratchet strap to one of the lugs on the wire entry end of the lubricator collar via a bow shackle. Secure the other end to a suitable fixed position to prevent the lubricator collar from travelling with the wire rope. Replicate this using the second ratchet strap, bow shackle and lug on the lubricator collar.
- Note the ratchet strap is in high tension and strain during operation. Please ensure that all fittings are tightly secured prior to operation.
- The lubricator collar must be able to move laterally during operation to ensure even wire rope spooling on and off the rope drum.

Page | 15

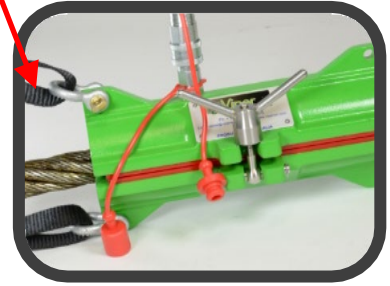

***The Viper Mini MKII
Wire Rope Lubricator
is now assembled and
ready for use.***

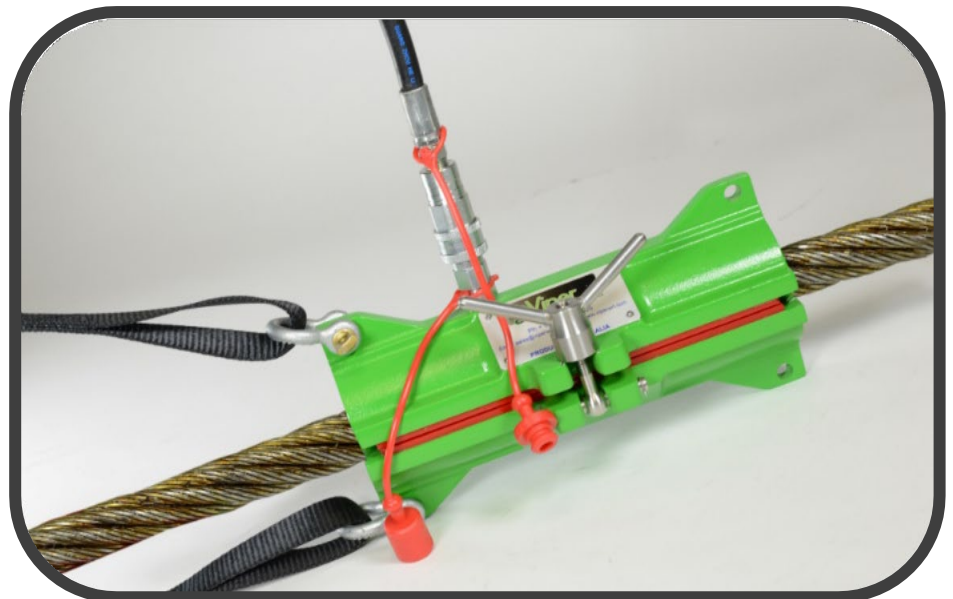

5.0 Viper Mini MKII High Flow Assembly Instructions

1. Remove all components from Viper Mini aluminium carry case, unpack from packing materials and lay out on a flat surface. Check all items are present as per your purchase order.

Remove grease pump noting that the air inlet isolation valve, air regulator

Page | 16

2. and high-pressure needle control valve are preassembled onto the pump.
 - Connect site specific compressed air connector to the air regulator. (not supplied)
3. Remove lid from lubricant container and place follower plate onto the top of the lubricant. Press down firmly until the follower plate comes in contact with the lubricant.
 - Note the Viper Mini lubricator should only be used with high quality wire rope lubricants with a consistency of NLGI#00 to 2.
4. Fit the drum cover over the top of the lubricant container and tighten the three securing screws until they contact the container.
5. Clamp the grease pump handle onto the grease pump body and tighten the two screws.
6. Slide the grease pump shaft into the opening of the drum cover and the follower plate. Push the grease pump down into the grease until it touches the base of the grease container.
7. Connect the high-pressure grease hose to the grease pump outlet via the quick connect coupling.



6.0 Ratchet Strap Buckle Assemblies - Ref: AW107

Basic Steps of Operation

To Tighten:

1. Secure Hooks on either side of load.
2. Insert free end of strap through slot A and pull through excess webbing
3. Push down and pull up Handle B to work the ratchet strap till strap is as tight as possible.
 - a. Do not over tighten, as the straps are only designed to maintain position of the Viper Collar.
4. Ensure at least 2 to 3 revolutions of webbing are around centre cam A.
5. Push Handle B down to lock your Tie-Down.


Page | 17

To Release:

1. Pull back on quick release C and hold.
2. Pull handle B up and over to a fully open flat position.
3. Pull tie-down up to loosen strap and remove from slot A.

To be used as a guide only

Please note: Lubricate all moving parts on a regular basis.

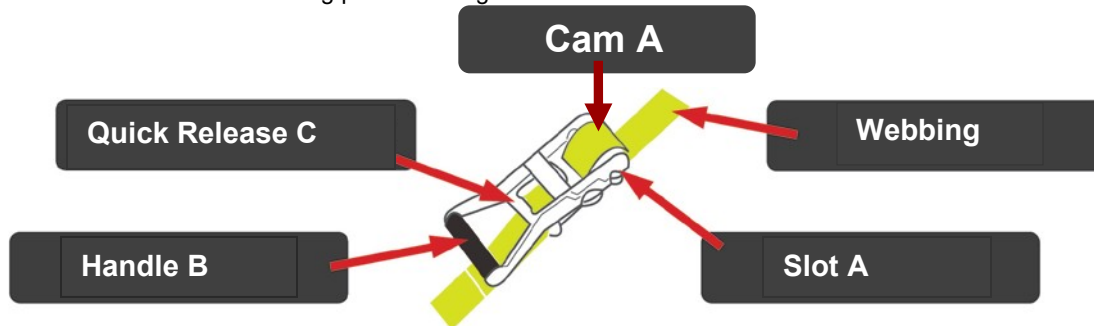

Use and Care Instructions – Webbing Load Restraint Systems Ref: AW116

Use: The selected lashing system should be both strong enough and of the correct length for the mode of use. Good lashing practice should always be followed; the fitting and removal operations of the lashing should be planned before starting a journey. The lashing should be suitably pre-tensioned and regularly checked.

CAUTION: NOT TO BE USED FOR LIFTING

INSPECTION: Web lashings and any fittings or coupling components attached should be subject to frequent visual inspection and regular examination by a competent person. Web lashings shall be withdrawn from service if there is cause to doubt fitness for use.

MARKING: Use only legibly marked and labelled web lashing.

OVERLOADING: Lashing systems should not be overloaded. Mechanical aids such as levers or bars should not be used unless they are specifically designed for use with the device.

PROTECTION: The webbing and labels should be protected against friction, abrasion and damage from load with edge radii less than twice the webbing material thickness, using protective sleeves or corner protectors.

SERVICEABILITY: Normal wear and tear can reduce the strength of the webbing assemblies. If webbing is damaged by more than 10% of its original state due to abrasion, cuts, prolonged exposure to sunlight or chemicals then it should be replaced. Similar, if tensioning devices such as hand ratchets and end fittings are damaged by wear or corrosion they should be replaced.

RESPONSIBILITY: It is the responsibility of the owner, the driver and the person in charge of the loading to ensure that a vehicle's load restraint and attachments, and the load securing equipment, are serviceable and strong enough for their application.

NOTE: The user of this strap assumes all risk and liability for its handling and use.

For further information please refer to the RTA 'Load Restraint Guide'.

7.0 Viper Mini MKII Standard Wire Rope Lubricator - Operating Instructions

With the Viper Mini MKII Wire Rope Lubricator assembled and mounted correctly as per the previous instructions, you are now ready to operate the system and lubricate the nominated wire rope. Page | 18

1. Open the air supply to the lubricant pump via the air control valve. Check that the air regulator is set to 7 bar. (105psi)

THE VIPER MINI MKII IS NOW CHARGED AND READY FOR OPERATION.

2. Start the wire rope moving through the Viper collar and then slowly open the lubricant flow control valve. Continue to open until an even coating of grease is visible on the wire rope exiting the collar.
 - Speeds of up to 2,000 metres per hour are possible but this depends on several factors, including the rope size, speed and specific lubricant in use.
3. The lubricant flow can be controlled by adjusting the air pressure control valve and should be adjusted as required to provide the correct lubricant flow rate into the lubricator collar, thereby onto and into the wire rope.
 - If the lubricant flow rate is too high lubricant will begin leaking out of the Viper collar at the rope entry point.
 - Reduce the lubricant flow by adjusting air regulator. Alternatively increase the wire rope speed through the lubricator collar until the correct amount of lubricant appears on the wire rope.
4. Visually inspect the wire rope as it exits the collar to observe if full lubricant coverage is being achieved.
 - If insufficient coverage is being achieved, increase lubricant flow rate by adjusting air pressure until an even coating occurs.
 - Alternatively reduce the rope speed until an even lubricant coating occurs.



5. If lubricant leakage occurs around the collar, check the collar is correctly tightened and seals are fitted correctly.
6. An even balance between lubricant volume and wire rope travel speed is required to achieve an even lubricant film combined with optimum penetration.
7. Once the optimum lubricant coverage is achieved, run the complete rope at a consistent speed through the Viper.
8. Note that the Viper collar with flexible seals is not a pressure vessel and is not designed to hold pressure. The grease pressure is generated by both the pump and the action of the rope travelling through the lubricant chambers in the seal. The Viper grease pump should not be operated with the wire rope stationary.



8.0 Viper Mini MKII High Speed (HS) WRL Operating Instructions

With the Viper Mini Wire Rope Lubricator assembled and mounted correctly as per the previous instructions, you are now ready to operate the system and lubricate the nominated wire rope.

1. Make sure the high-pressure lubricant flow control valve is closed (turn clock wise to close).
2. Open the air supply to the lubricant pump via the air control valve. The pump may start to pump for a short period but will stop as the lubricant reaches the closed lubricant flow control valve. Check that the air regulator is set to 7 bar. (100psi)
3. Open the high pressure lubricant flow control valve slowly by turning anti clockwise and proceed to fill the installed seal with lubricant. Once lubricant appears at the wire rope entry point or in the overflow drain line, close the lubricant flow control valve by turning clockwise.

THE VIPER IS NOW CHARGED AND READY FOR OPERATION.

4. Start the wire rope moving through the Viper Mini collar and then slowly open the lubricant flow control valve. Continue to open until an even coating of grease is visible on the wire rope exiting the collar.
 - Speeds of up to 2,000 metres per hour are possible but this depends on a number of factors, including the rope size, speed and specific lubricant in use.
5. The lubricant flow control valve should be adjusted as required to provide the correct lubricant flow rate into the lubricator collar and thereby onto and into the wire rope.
 - If the lubricant flow rate is too high lubricant will begin leaking out of the Viper Mini collar at the rope entry point or from the excess lubricant clear hose.
 - Reduce the lubricant flow by turning the flow control valve clockwise. Alternatively increase the wire rope speed through the lubricator collar until the correct amount of lubricant appears on the wire rope.
6. Visually inspect the wire rope as it exits the collar to observe if full lubricant coverage is being achieved.
 - If insufficient coverage is being achieved, increase lubricant flow rate by adjusting the lubricant metering valve anti clockwise until an even lubricant coating occurs.
 - Alternatively reduce the rope speed until an even lubricant coating occurs.
7. If lubricant leakage occurs around the collar, check the collar is correctly tightened and seals are fitted correctly.



8. An even balance between lubricant volume and wire rope travel speed is required to achieve an even lubricant film combined with optimum penetration.
9. Once the optimum lubricant coverage is achieved, run the complete rope at a consistent speed through the Viper Mini collar.
10. Note that the Viper Mini collar with flexible seals is not a pressure vessel and is not designed to hold pressure. The grease pressure is generated by both the pump and the action of the rope travelling through the lubricant chambers in the seal. The Viper grease pump should not be operated with the wire rope stationary.



Unlubricated wire rope

Lubricated wire rope



9.0 Lubricant Penetration

To inspect internal lubricant penetration, use a sharp spike or heavy-duty screwdriver to open the wire rope. Alternatively, two pipe wrenches secured one metre apart, and rotated in opposite directions will allow visual inspection.

Page | 22

Lubricant penetration to the wire rope core is often difficult due to the following:

- Wire rope design, particularly anti-spin and locked core wire ropes.
- Dirty or contaminated wire ropes.
(Use of a Viper Wire Cleaner is recommended)
- Ropes contaminated with solid used lubricant coatings.
(Use of a Viper Wire Cleaner is recommended)

During the wire rope operation, the rope movement onto the drum and over sheaves is known to assist with the lubricant penetration.

If an NLGI#2 grade grease is used it may be necessary to pre-heat the lubricant at ambient temperatures below 5 degrees C (41 F) to ensure adequate penetration. Check with lubricant suppliers for method of pre-heating and individual lubricant specifications. Be sure that the lubricant used will adequately protect your wire rope from corrosion and wear.



10.0 Equipment Specifications

Drum Pump

	Standard Kit	High Speed Kit
Maximum operating air pressure	120 psi	120 psi
Pump ratio	50:1	45:1
Flow rate approximately	2,900 gram per min	4,500 gram per min
Volume of compressed Air	165 L/min at 7 bar	250L/min at 7 bar

Guideline pressures are as follows:

Air Pressure for all Wire Rope Diameters 4 - 7 bar (60-105 psi)

Viper Collar

- Cast aluminium construction with enhanced mechanical properties and excellent resistance to corrosion, heat treated to T6.
- Lugs tested to withstand 800kg of resistance.
- Coating: 3 coat treatment.
- Salt – Spray Resistance to ASTM B117-73 - 2,000 hours
- Humidity Resistance to ASTM D2247 - 1,000 hours

Seals

- Estimated average operational life – 10,000+ metres
- Shelf life 2-3 years (based on correct storage)
- Chemically resistant to commercially available mineral wire rope lubricants.
- The lubricator seals may be washed with a mild petroleum cleaner.
- Do not leave the seals to soak in cleaning fluid which may be detrimental to their composition.
- It is important to store the seals away from UV light. The seals will be harmed if left for extended periods in sunlight.
- Seals should be kept in sealed plastic bag as supplied.

(Note: Lubrication Engineers reserves the right to change specifications as and when required.)



11.0 Trouble Shooting

1. NO LUBRICANT ON WIRE ROPE AFTER START UP

- a) Check lubricant container content.
- b) Check lubricator pump air shut-off valve is open.
- c) Check air pressure on gauge.
- d) Check lubricant control valve is open (for High Speed Kits only).

2. INADEQUATE LUBRICANT COVERAGE

- a) Utilize lubricant drum heater or change to lighter viscosity if ambient temperature is 5°C or below.
- b) Increase air pressure and hence lubricant flow, until correct quantity of lubricant is on wire rope.
- c) Reduce wire rope speed to ensure complete coverage.

3. TOO MUCH LUBRICANT ON WIRE ROPE

- a) Reduce volume of lubricant via the flow control valve (for High Speed Kits only).
- b) Increase wire rope speed through the lubricator collar.
- c) Use a combination of both.
- d) Investigate type of wire rope lubricant used.
- e) Measure rope diameter and ensure correct seals in use.

4. LEAKING FROM COLLAR

- a) Tighten collar clamping screws
- b) Check correct Viper seal is being used for wire rope size.
- c) Check air pressure reduce if required.
- d) Adjust lubricant flow rate air pressure.
- e) Check condition of seals for any damage.
- f) Seal ribs may be filled by hardened waste lubricant/contamination. This should be checked and cleaned as required.



12.0 Safety Recommendations

12.1 Caution Level Rating

- Before installation of the wire rope lubricator onto the cable, ensure the work area is clean and safe to work in with adequate space around the cable where the Viper collar will be attached.
- Ensure buckles and straps, D shackles and attachment points used to anchor the Viper Lubricator are rated for a minimum WWL of 500 kg.
- Check hydraulic hose, couplings air lines and fittings for damage or wear, before connecting to grease pump and Viper lubricator collar. Carry out visual inspection of the Viper collar to ensure it has not been damaged during transport or handling. Damage to the casing that prevents it from sealing correctly will severely reduce the unit's ability to force lubricant into the ropes core and could be a potential safety hazard.
- Always ensure the return grease line feeds to a container of suitable size for receiving the excess grease from the Viper lubricator. Grease allowed to flow from the return line without being captured may cause a serious slip or environmental hazard.
- Note: Lubricants vary in their hazard and environmental ratings. Please ensure Material Safety Data Sheets for all lubricants used with the Viper are kept in close proximity to the kit. Lubrication Engineers recommend a copy of the lubricant in use MSDS is kept in the Aluminium carry case for reference as required. Lubrication Engineers supply a copy of the Viper WRL Coating Grease CG-0 MSDS with any kits that include this product.



12.2 Viper Mini MKII Assembly and Use

Danger Rating



- Before attaching the Viper lubricator collar to the cable, you must ensure the cable winch control has been locked out and tagged. Serious injury or death may occur should the cable winching equipment be activated while the Viper Lubricator is being fitted to the cable.



- When the Viper Lubricator has been assembled, attached to the cable and anchored in position, the lubrication system can be activated. While in operation the grease pump can generate up to 5,500 PSI grease pressure. Under no circumstances should the Viper collar be opened, or the grease hose disconnected while under pressure as this can cause serious injury.



- While in operation the Viper Lubricator utilises both high pressure air, up to 120 PSI max and high pressure grease up to 5,500 PSI. Always wear appropriate PPE (Personal Protective Equipment) while carrying out the cable lubrication operation.



- Suggested PPE includes, safety glasses, leather gloves, safety boots, long sleeved shirts, high visibility vest, hard hat and hearing protection.



- Lubrication Engineers recommend to only use pumps, fittings, hoses and accessories supplied or recommended by Lubrication Engineers. All our components have been tested to ensure they will work safely and effectively for extended duty cycles. Using non-approved components may lead to unexpected failure of the Viper Lubricator and / or its components causing serious injury to maintenance personnel.



13.0 Viper Mini MKII Wire Rope Lubricator - Guarantee

The **VIPER Mini MKII** Wire Rope Lubricator Kit and all the components are guaranteed for a period of 12 months from date of purchase against any fault of manufacture or material failure.

Page | 27

Fair wear and tear are expected of the unit and are not covered by this warranty. Tearing of the seals due to broken wires or other obstructions are not covered by this warranty.

Any parts to be claimed under warranty must be first returned to Lubrication Engineers Pty Ltd for inspection prior to warranty being granted.

***Commercially available wire rope lubricant NLGI 00-2.
(Approved Lubricants list available)***

The Viper Mini MKII is supplied and supported by -



26 Prince William Drive, Seven Hills,
New South Wales, Australia, 2147

Web – www.ViperWRL.com

Email – sales@ViperWRL.com

Ph: +61 2 9636 5655

Fax: +61 2 9636 8566

