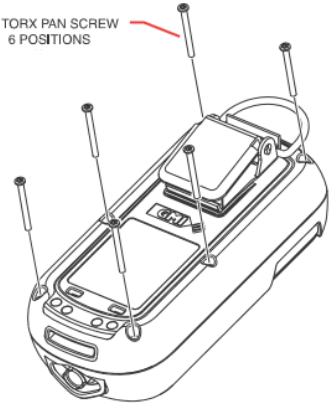

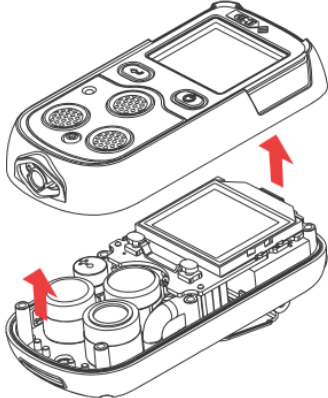
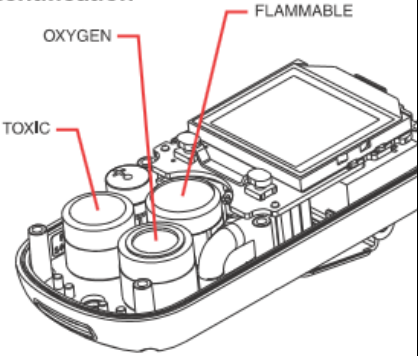
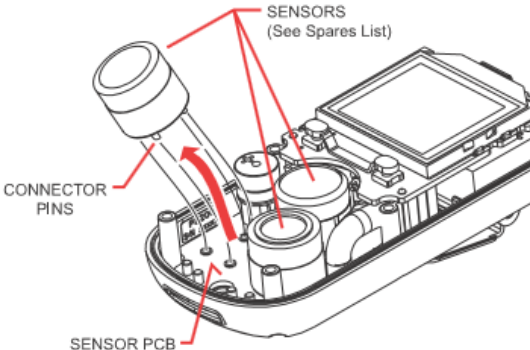
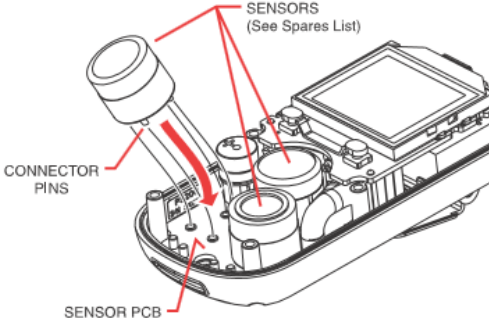
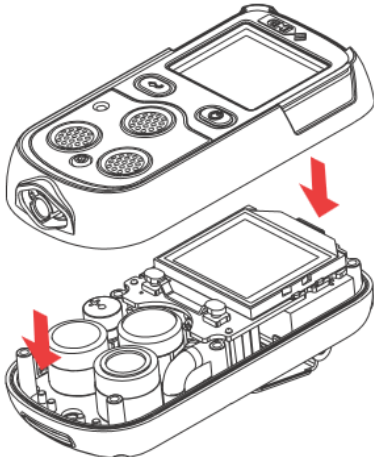
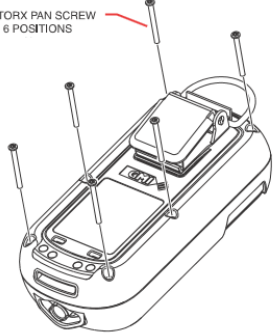


MARINE4 SENSOR REPLACEMENT – QUICK GUIDE

PLEASE REFER TO MAINTENANCE MANUAL FOR MORE DETAILS

Caution: Follow E.S.D (Electrostatic Sensitive Devices) procedures during disassembly / assembly of the instrument. Never touch the LCD except with E.S.D. gloves or tongs, and only with minimal handling.

WARNING: Following replacement of sensor(s), the instrument must be calibrated before use.

STEP 1	STEP 2	STEP 3	STEP 4
 <p>TORX PAN SCREW 6 POSITIONS</p>	<p>LAY DETECTOR FACING UPWARD</p> 		<p>Sensor Identification</p>  <p>OXYGEN TOXIC FLAMMABLE</p>
STEP 5	STEP 6	STEP 7	STEP 8
<p>PLEASE ONLY REMOVE THE CORRECT EXPIRED SENSOR AS PER STEP 4 IDENTIFICATION GUIDE -</p>  <p>CONNECTOR PINS SENSORS (See Spares List) SENSOR PCB</p>	<p>PLEASE ONLY REPLACE THE CORRECT SENSOR</p>  <p>CONNECTOR PINS SENSORS (See Spares List) SENSOR PCB</p>		<p>TORX PAN SCREW 6 POSITIONS</p>  <p>TORX PAN SCREW 6 POSITIONS</p> <p>AFTER STEP 8, PLEASE LEAVE TO WARM FOR AT LEAST 1 HOUR AND THEN COMPLETE A CALIBRATION BEFORE USE</p>